

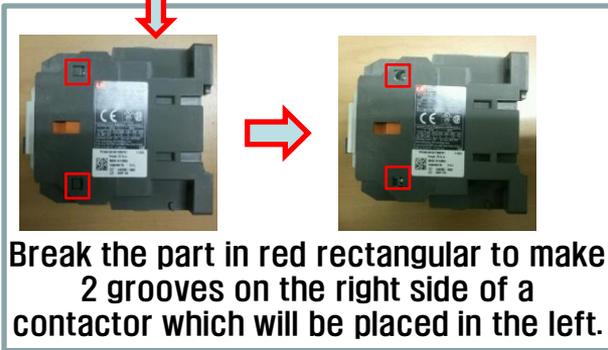


◎ How to mount UR-02 on the product

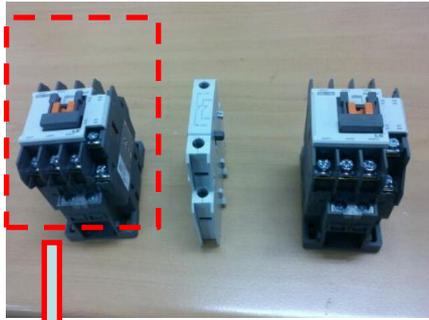


Break the part in red rectangular to make 2 grooves on the right side of a contactor which will be placed in the left.

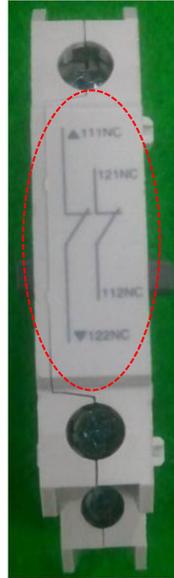

Before assembly, check if MC & UR are on the right direction.



Match hooks on UR-02 with grooves on the side of a MC

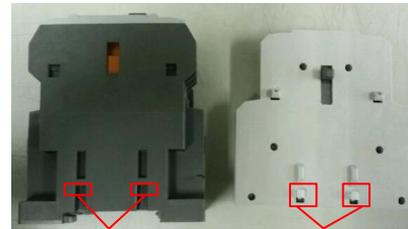

grooves


hooks



Lean UR-02 against the MC little bit, and put them together while pushing up the bottom of UR-02



When UR-02 is fully placed on the product, push it above to make it perfectly assembled.

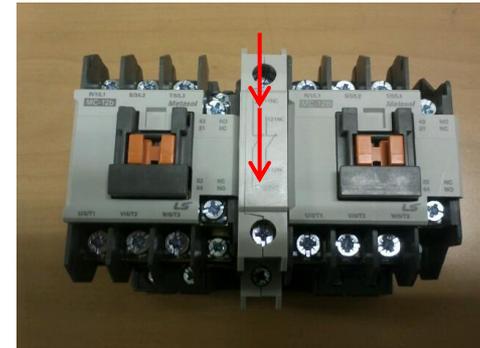

For another MC, assemble in the same way to complete reversing contactors. Then push UR-02 to check their assembly